



RipCap 42mm Pneumatic Closing Machine User Guide



Before use


SAFETY GLASSES are to be worn when using this machine



The RipCap Closing Machine can be used for quality control in a laboratory or for production in a bottling line. When used for production the RipCap Closing Machine must be securely fixed to a work bench.

The Closing Machine requires a compressed air connection of around 6 bars. Connect the compressed air pipe from the compressor to the pressure gauge on the Closing Machine. No other utilities like electricity are necessary to operate the Closing Machine.

This machine is designed only to close RipCap 42mm bottle caps

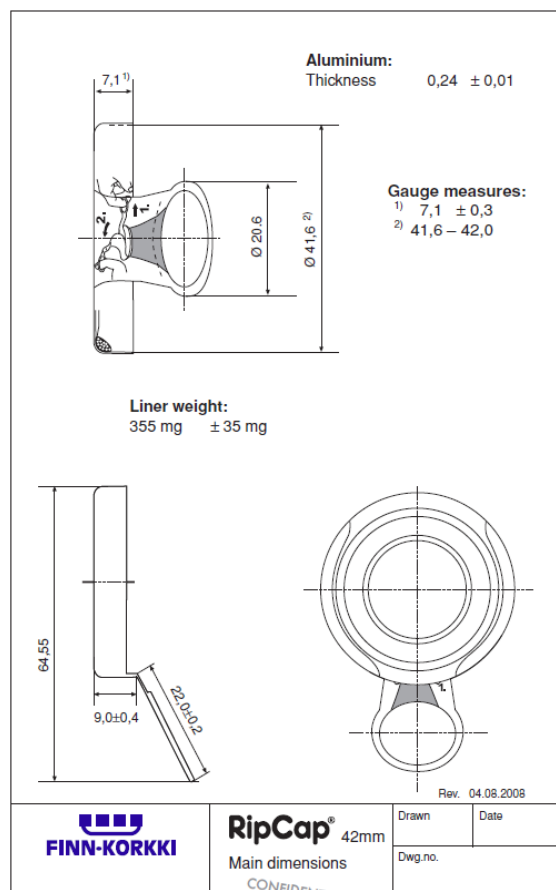

Height adjustment for bottles


A bottle with a RipCap on is placed centrally below the Sealing head plunger. The Sealing head aligns the RipCap exactly before the Sealing head fingers crimp and seal the RipCap.

A bottle stop may be used to assist with the placement of the bottle.



Sealing head plunger

Place a hand on each control

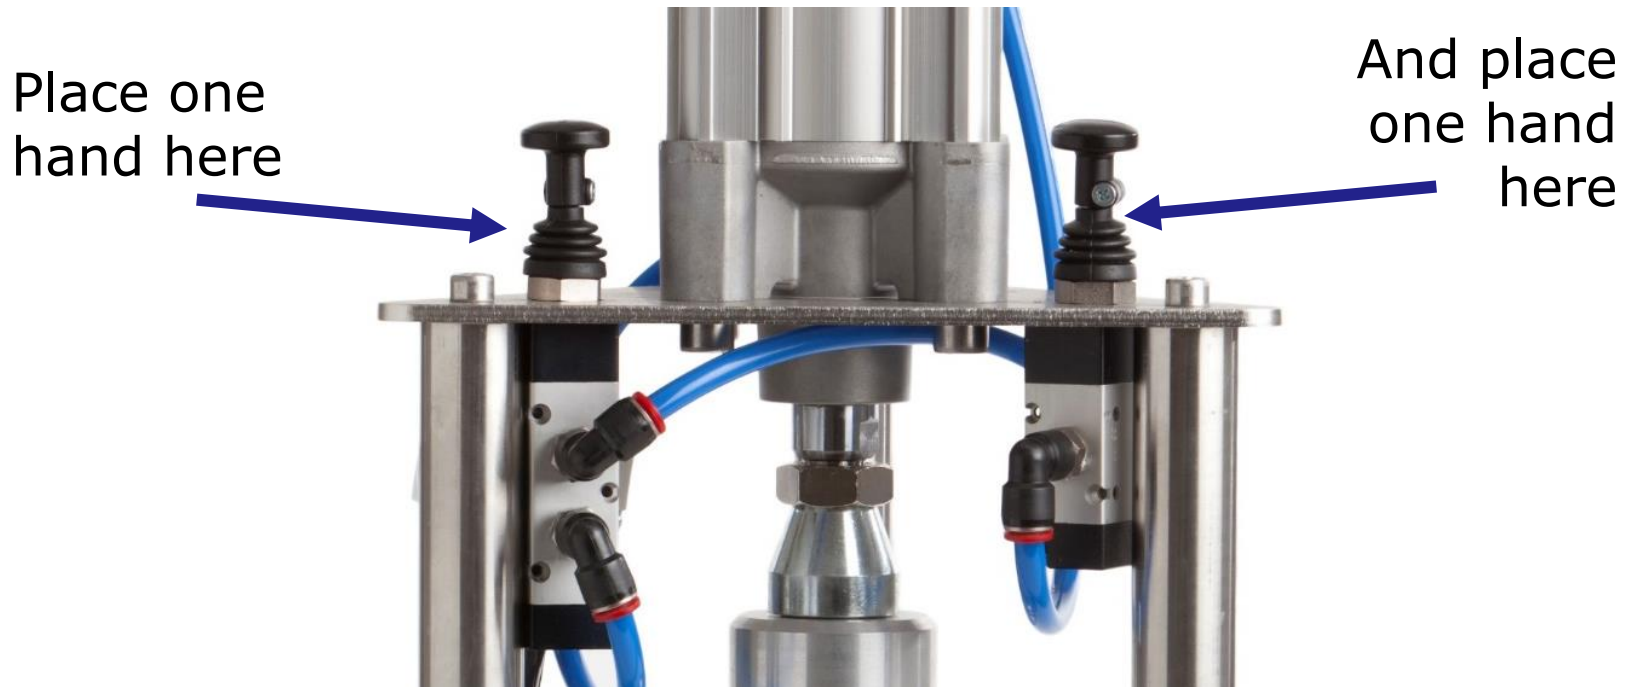

Move controls with hands and hold until sealing head has completed closing operation. Then release control and remove bottle.

Maintenance

RipCap 42mm capping heads may need maintenance after 700,000 closing operations.

When maintenance becomes necessary then contact Finn-Korkki for the spare parts and instructions.

A visual inspection of the closed RipCap can give insight into when the capping head needs maintenance. For example, when uneven crimping of the cap is observed.